

My Chromebook Won't Turn On

If your Chromebook will not turn on, then follow these directions

1. Unplug the Chromebook
2. If the light is lit on the left side, then press and hold the Refresh key and tap the Power button. (If the light is not on, then proceed to step #4).
3. When your Chromebook restarts, release the Refresh key.
4. If the light isn't lit, then hold the Refresh button and the power button for 10 seconds. Then repeat step #2.
5. If the device doesn't turn on, then press the refresh key again.
6. Press the power button to turn on the device.



If your computer will not turn on after following the steps above, then contact your teacher.